

FUNCTIONS OF LUCY&LOLA

Interactions LUCY&LOLA

When Lola and Lucy* are together and Lucy performs certain actions, Lola will also want to participate. In the following orders of Lucy (see images), Lola also interacts. (* Lucy sold separately).



 
Voice command: "GIVE ME A KISS"
Description: Lucy gets up and jumps forwards to kiss you. Lola moves the head and the tail and kisses you.



Voice command: "BARK"
Description: Lucy barks several times and stays still. Lola remains static and barks.



Voice command: "DANCE"
Description: Lucy stretches out on the floor and dances. Lola moves the head and the tail and sings.

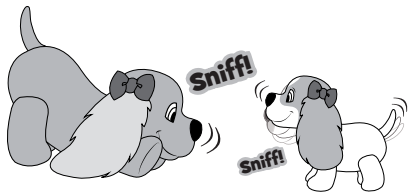

Voice command: "SEARCH"
Description: Lucy sniffs the ground. Lola moves the head and the tail and searches.



Voice command: "HELLO"
Description: Lucy barks and stays still. Lola moves the head and the tail and barks.



94802_V17_EN

INSTRUCTIONS FOR USE

LOLA



REGISTERED DESIGN © IMC TOYS

Made in China

Batteries

 
3x LR03 (AAA) 1.5V




IMC. TOYS, S.A. • Pare Llaurador, 172 • 08224 Terrassa (Barcelona) SPAIN
 Tel. 0034 937 888 992 • Fax 0034 937 332 833 • e-mail: info@imc.es • www.imc.es
 After Sales Service e-mail: sat@imc.es

94802IMGB • EAN: 8421134094802 • 201115

LOLA

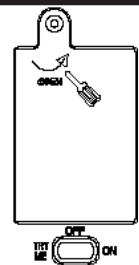

1

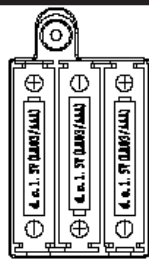 


2



3

 FUNCTIONS OF LOLA

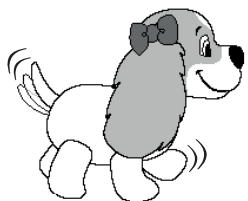

Voice command:

"COME HERE"

Description: She walks sniffing and moves the tail.



Voice command:

"DO YOU LOVE ME?"

Description: She moves the head and the tail and kisses you.



Voice command:

"EAT"

 
Description: She makes eating sounds.



Voice command:

"ARE YOU HAPPY?"

Description: She barks 3 times and walks while she's moving the tail.

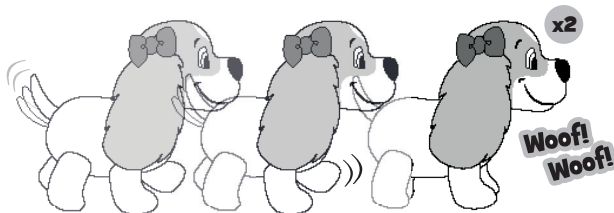

Voice command:

"WALK AROUND"

Description: She walks and stops two times while she's moving the tail and barks two times.

INSTRUCTIONS FOR USE

PRODUCT FEATURES

LOLA responds directly to 5 orders. She walks, barks and moves her head and tail. She also gives kisses.

USE AND OPERATING INSTRUCTIONS

IMC TOYS products undergo strict production controls to guarantee the enjoyment and safety of your children. They are easy to use and operate. We are certain that they will provide your children with great entertainment. Thank you for purchasing one of our products.

To consult our extensive product catalogue, please visit our web page at www.imc.es.

OPERATION WITH BATTERIES

IMPORTANT INFORMATION

NOTE FOR ADULTS

Before giving the product to children, first remove all plastic, wires and any other object designed to fasten it during transport.

Replacement and installation

LOLA requires 3 LR03 (AAA) batteries (included). Firstly, open the velcro closure and set the switch to the OFF position (see fig. 1). Remove the safety screw from the lid of the battery compartment located at the bottom of the base (see fig. 1). Notice the correct placement of the batteries in the image (see fig. 2) and place them according to the position and polarity indicated. Replace the lid and the safety screw (for your children's safety) and finally close the velcro closure.

Warning! Replacing or handling the battery should always be done under the supervision of an adult.

Operation

Renaming: LOLA

With the switch in ON position, follow these steps if you want to record different names for your pet:

- 1) Squeeze the dog's right ear (A) (see fig. 3). She'll bark 2 times.
- 2) Tell her the name you prefer. For example: "Lola". She'll bark twice.
- 3) Repeat the name again, if she barks 2 times you can continue to the next step and if she doesn't bark twice you have to start the renaming procedure again (1).
- 4) Finally, repeat the same name. She will bark twice and move her tail confirming the name recording.

If not, repeat the name until you succeed. Now she'll recognise you by the name you have given her.

Important! While recording the name, keep the area free of noises or sounds that may interfere. Remember the name and how you say it. As a precaution and to avoid problems, LOLA will always respond to her original name whatever subsequently recorded.

Voice commands or orders:

To give voice commands, first say the name you recorded earlier so that she can hear you (such as "LOLA"). The dog will bark, indicating that you can give her the order you want. Say the order you want her to

follow loud and clear. If she understands you well she will follow the order indicated. You must wait until she stops barking before giving one of the next voice commands. If she doesn't recognise the voice command, repeat her name, wait until she barks and give the command again. Remember that LOLA can't hear you or make sounds while moving and that there should not be too much noise around you when you give the voice commands to avoid confusion.

Energy saving mode

After a few seconds of inactivity LOLA will bark pitifully and disconnect. Click on the (A) button to activate her again. After playing with her, we recommend that you turn the switch to the OFF position so that she is completely turned off.

Tips for proper use

Troubleshooting

LOLA not responding, a decrease in the volume of the sound, and erratic movement are symptoms of dead batteries; they must be replaced.

MAINTENANCE

Cleaning: Only wash the surface of the product by hand. Remember that there are mechanisms and electronic circuits inside it which could be damaged when in contact with water. Use a cloth slightly dampened with water or dry foam, if necessary, and then dry immediately with a dry cloth or leave it to dry indoors, without exposing to sunlight or direct heat sources. Do not use detergents or solvents.

Do not use it until it is completely dry. If the equipment becomes wet, turn it off and remove the batteries immediately. Dry the battery compartment with a dry cloth. Leave the battery compartment open until it is completely dry. If you wish, use a hairdryer to speed this process up. Do not try to use the unit until it is completely dry.

RECOMMENDATIONS FOR RESPONSIBLE USE AND FOR PROTECTING THE ENVIRONMENT

Put all the transport packaging, cardboard, plastic, etc, in the recycling containers in your neighbourhood. Use rechargeable batteries whenever possible.

Remember to turn off the toy if you have finished playing with it and take out the batteries if you are not going to be using it again for a long time.

If you no longer want the toy and it still works, do not throw it away. Remember that other people can still enjoy it, and find bodies or associations that can give it to them.

At the end of the life span of this product, it must not be disposed of as normal household rubbish. It should be delivered to a collection point for recycling electrical and electronic devices. Consult the symbol on the product, in the user manual or on the packaging for more information.

The materials are recyclable in accordance with their markings. If you recycle materials or find ways to reuse old devices, you make

a considerable contribution to protecting the environment. Please consult the nearest recycling centre or local authorities.

WARNINGS!

-Warning: Not suitable for children under 3 years of age. It contains small parts which might be ingested by them. Choking hazard.

-Please keep the packaging for future reference as it contains very important information.

-Please note that due to technical improvements this product may differ from the one that appears in the illustration.

-This product requires 3 type 1.5 V LR03/AAA batteries (included).

-This product is distributed with 3, LR03/AAA batteries for the "try-me" function. For normal operation of the product, it may be necessary to replace the batteries.

-This product achieves better performance using alkaline batteries.

-The batteries or accumulators must be inserted according to the polarity indicated in the illustration.

-Used batteries or accumulators must be removed from the toy; failure to do so could cause damage.

-Do not mix old batteries with new ones.

-Do not mix different types of batteries.

-Use only those batteries recommended by the manufacturer or equivalents.

-Non-rechargeable batteries must not be recharged.

-The battery terminals must not be bridged or shorted.

-Changing or handling the batteries must always be carried out under the supervision of an adult.

-Remove the batteries from the compartment if the unit is not going to be used for a long period of time.

-Please respect the environment and deposit used batteries in the containers provided.

-Rechargeable batteries are to be removed from the toy before being charged.

-Rechargeable batteries are only to be charged under adult supervision.

-Read the instructions before use, follow them and keep them for reference.

-Under the environment with radio frequency interference, the sample may malfunction and will be resumed to normal after removal of the interference.

-Under the environment with electrostatic discharge, the sample may malfunction and require user to reset the sample.

-Under the environment with Fast Transient, the sample may malfunction and require user to reset the sample.

-Remove all elements designed to fasten and protect the product during transport before giving it to children (plastic pieces, labels, wires, etc.).